



NOTES:
 1. Depth of excavation is 3 feet.
 2. Keep as steep a slope along the sides of the excavation as possible.

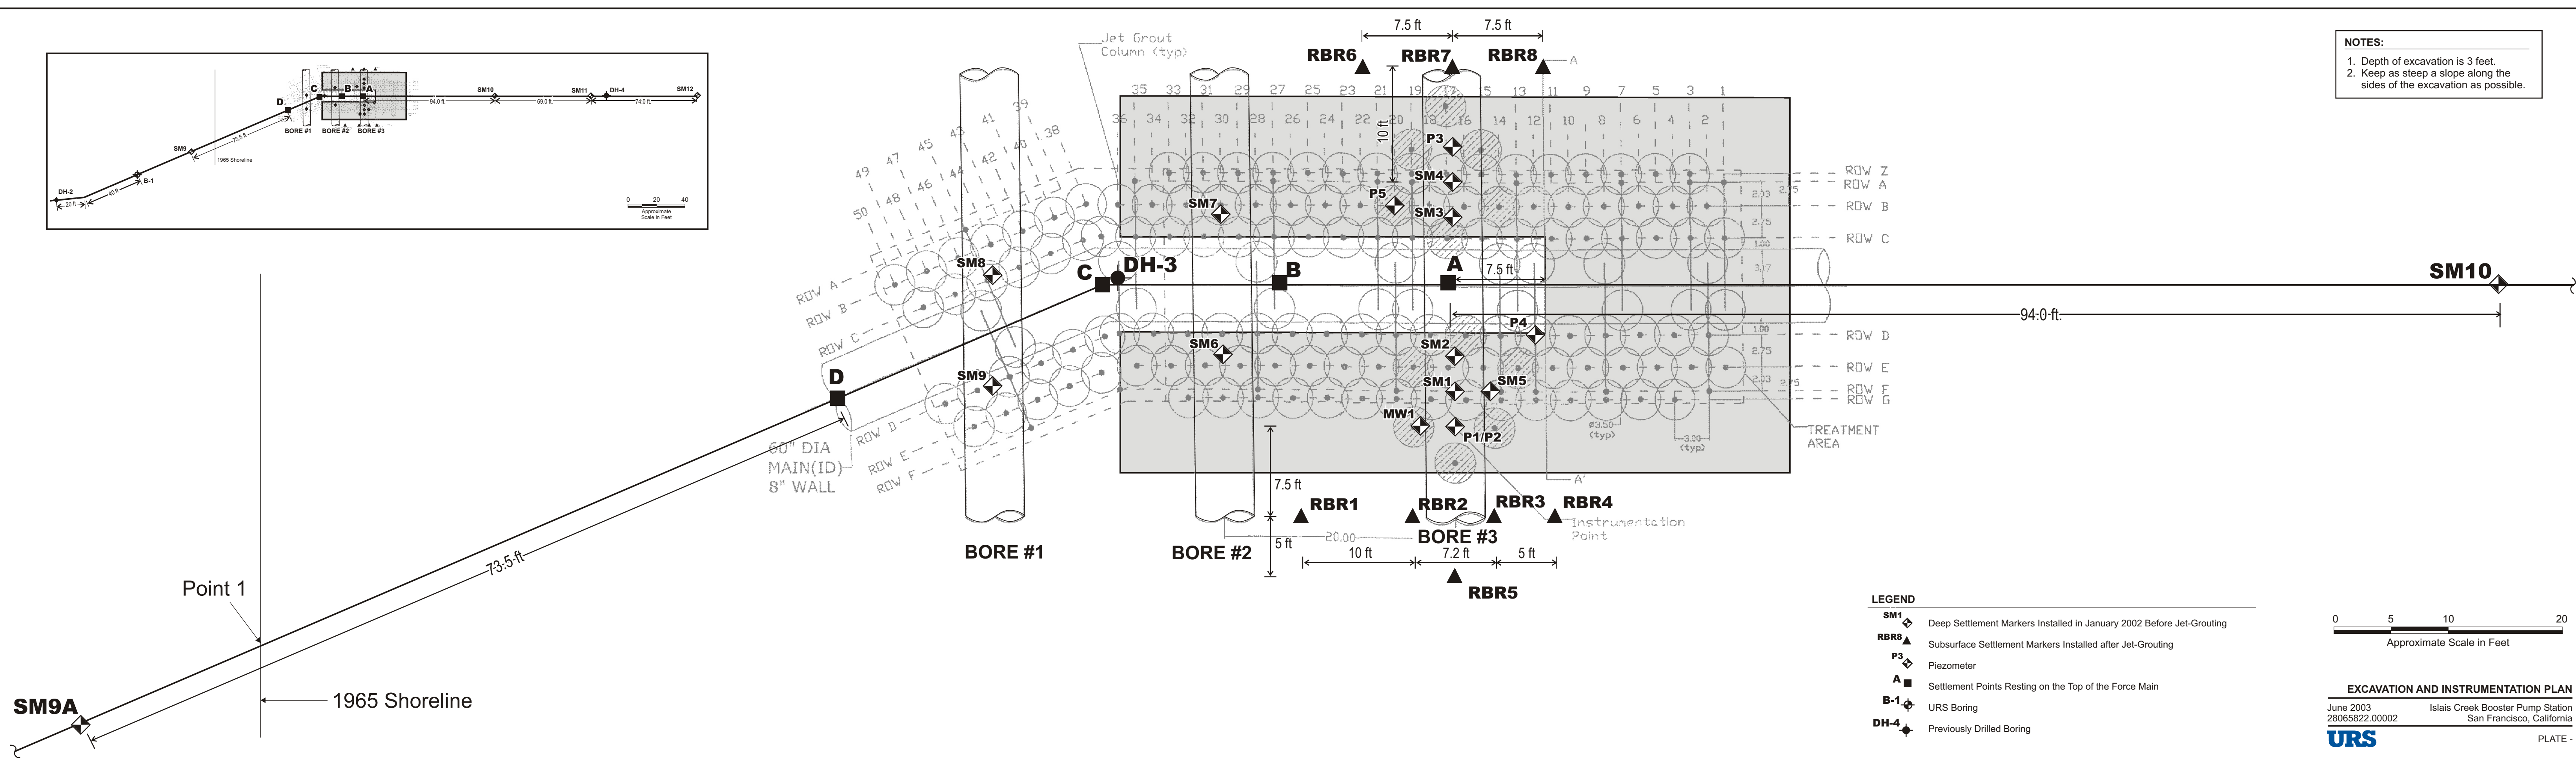

- LEGEND**
- SM1** ◊ Deep Settlement Markers Installed in January 2002 Before Jet-Grouting
 - RBR8** ▲ Subsurface Settlement Markers Installed after Jet-Grouting
 - P3** ◊ Piezometer
 - A** ■ Settlement Points Resting on the Top of the Force Main
 - B-1** ◊ URS Boring
 - DH-4** ◊ Previously Drilled Boring



EXCAVATION AND INSTRUMENTATION PLAN
 June 2003
 28065822.00002
 URS
 Isais Creek Booster Pump Station
 San Francisco, California
 PLATE -